

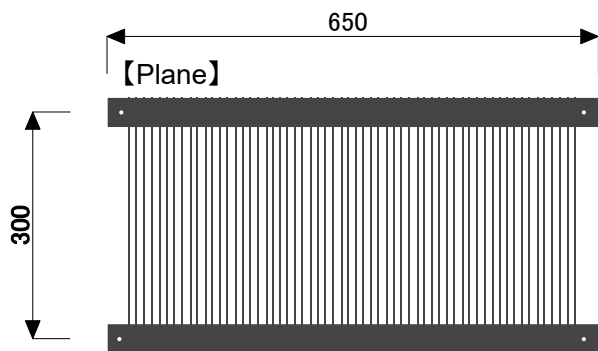


# How to assemble MiraCarbon CFK-3

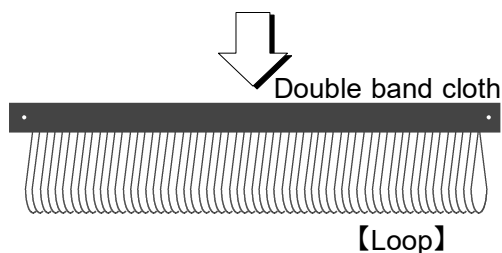

● How to make a loop

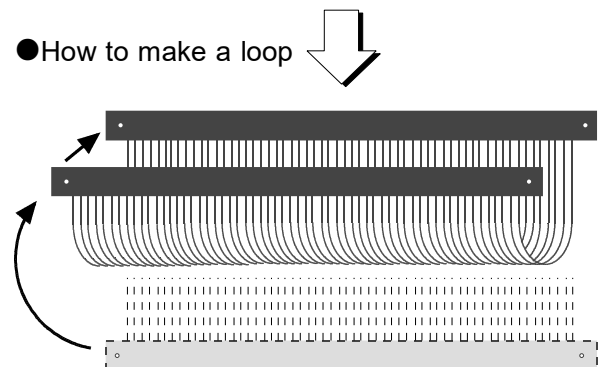

## 【Explanation】

CFK-3New is the CarbonFiber water purification material which reinforced with a band cloth on both sides of the fiber to prevent carbon fiber damage.

(Former CFK-3 and CFK-1 Improved product)

## 【Mounting method】

1. Plane mounting : Install using one side band cloth, both ends.
2. Loop mounting : Mounting with overlapping both side band cloths.



\* The Loop mounting is recommended for wastewater treatment and flowing rivers.

## 【Loop mounting description】

To make it looped, lay one side band cloth on the other band cloth and loop the carbon fiber. Align the mounting holes and install them with a cable tie.

## 【Plane mounting】

\* Recommended installation location : Shallow water depth (40cm~100 cm) ponds, rivers, aquarium etc

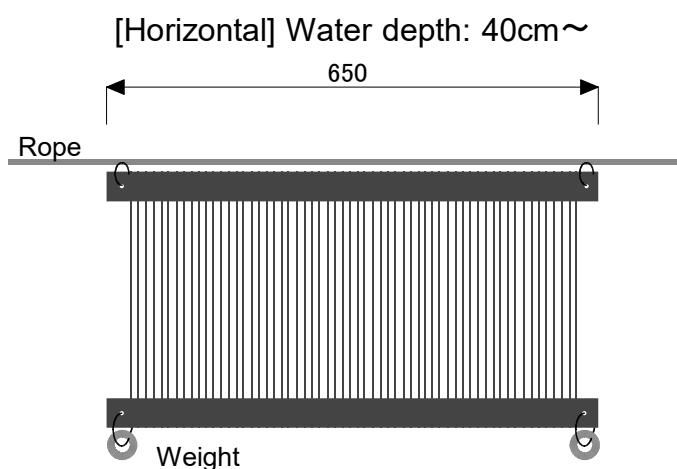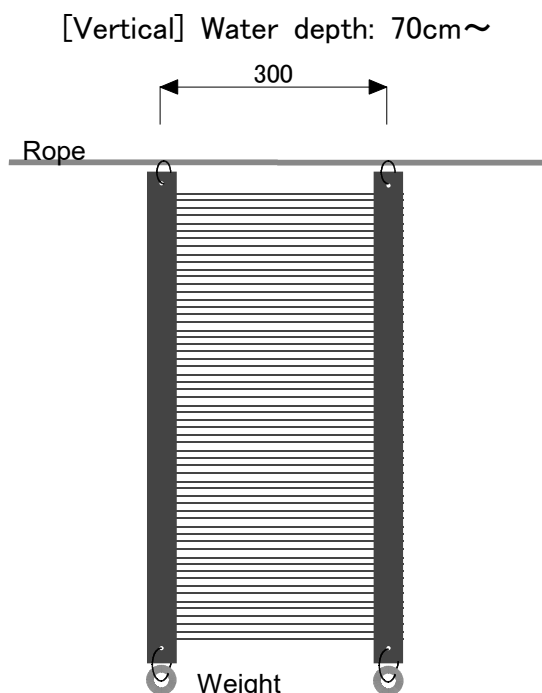

\* In case of multiple use, please install in parallel with the rope.


\* Please do not connect MiraCarbon directly in band cloth.

## 【Loop mounting】

【Length Connection Set】 IL-nK3-NN (Concatenate CFK-3×n length with rope. n=2 to 10)


\* Recommended installation location : WWP treatment tank·Rivers·Lakes with deep water depth.

【One side mounting】 IL-3K3L-NN

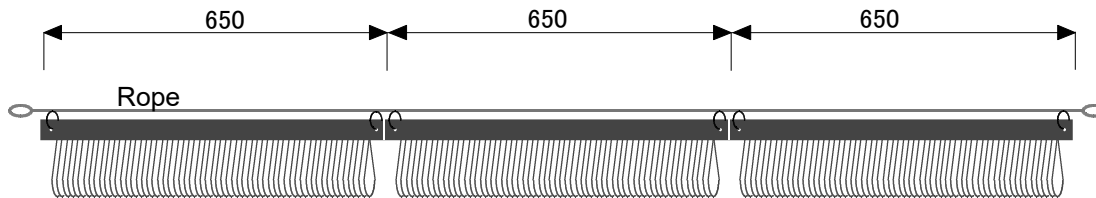

\* One side mounting can be used in both vertical and horizontal directions.

【Alternate mounting】 IL-3K3LA-NN

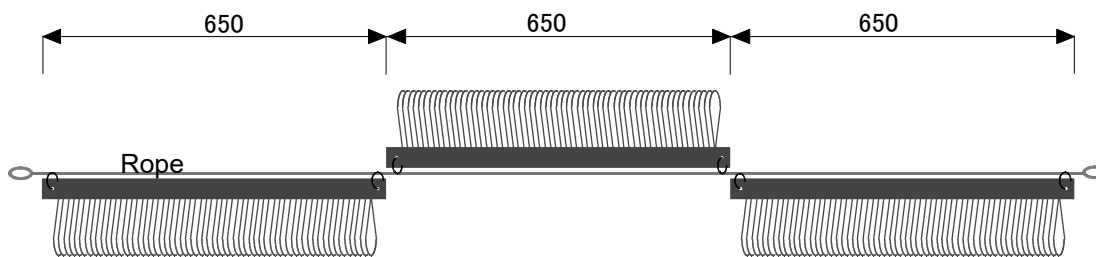

※ Illustration is horizontal display, but at installation it will be in the vertical direction.

【U type attaching set】 U-K3-n (Concatenate CFK-3×n U-type with rope. n=2 to 10)

\* Recommended installation location: shallow water channel, river, aquarium etc.

